




Hinges, tailgate, replacing

Separating the tailgate hinge

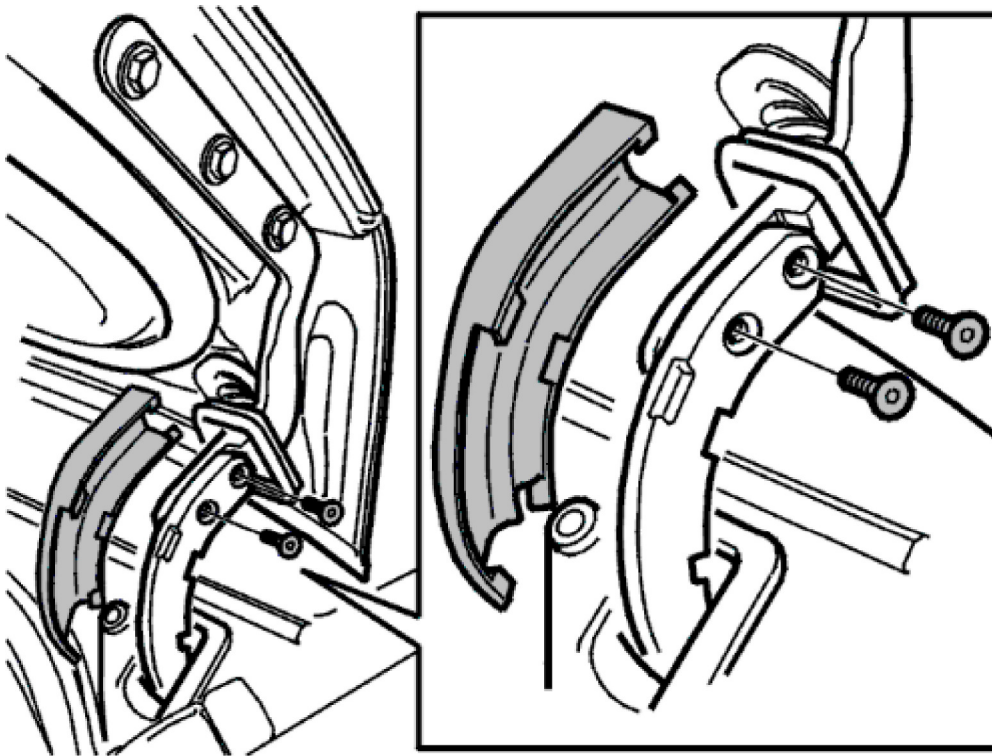

The hinge on the tailgate can be separated in the center. This means that the tailgate does not need to be aligned.

Note!

This task requires two people because of the risk of damage to the tailgate

- Remove the side piece
- Remove the wiring and the washer hose
- Remove two screws from each side.

Assembling the tailgate hinge

- Install the two screws and hinge.