



[Replacing headlining](#)  
[Water condensation on the inside of the roof](#)

## Replacing headlining



Open sun roof completely  
Disconnect battery negative lead

### Remove:

- Sun visor (2 screws) with holder (turn and pull out)
- Front roof lighting panel (pry off lens with a screwdriver). See [Electric motor and gear unit, replacement](#).
- Rear view mirror (2 screws). See [Replacing rear view mirror](#).
- Front seal grab handles. Open cover with a screwdriver at the top and remove 2 screws. Insert screwdriver at the top and twist handle down.)





- Rear seat grab handles. Pry off lens with a screwdriver and disconnect connector. Otherwise same method as for front seat grab handles
- B-post panel. Pull away. Leave the panel hanging in the seat belt.



- Cantrail panel between A- and B-posts. Pull away
- Cantrail panel between B- and C-posts. Pull away.

**Note!**

**Retaining clip behind B and C-post panels. Remove carefully by the C-post.**

Fold front seat backrests backward.


- 2 retaining clips at rear edge of headlining
- Edge molding around sun roof opening. Pull down.
- Slide headlining forward past C-post panels



Carefully place headlining over front seat folded backrests and dashboard



- Cables on top of headlining (taped). Mark cable routing on headlining  
Move gear selector lever to fourth gear or "L" for automatic transmissions

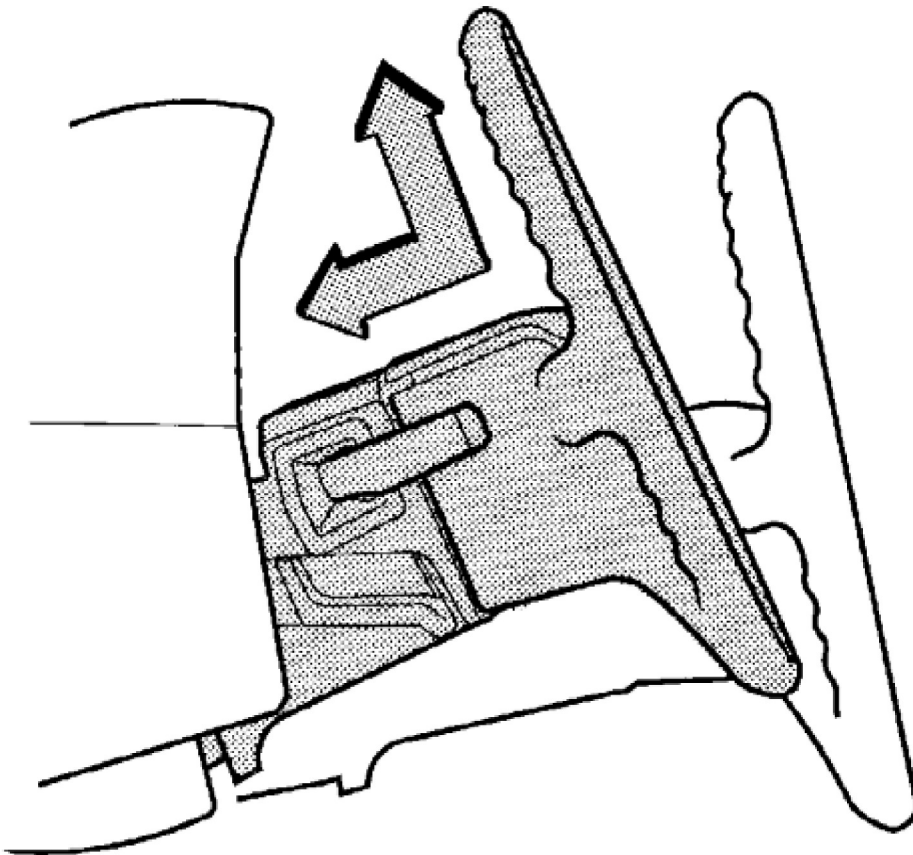

151 237

Adjust steering wheel: up and in as far as possible  
Carefully lift the headlining diagonally through right front door opening.

**Caution!**

**Do not bend the headlining**

**Install:**

In reverse order.

Tape cables into place as marked.

Secure the two clips at the rear edge of the headlining and finger tighten the front sun visors

- Edge molding around sun roof mounting  
Locate headlining carefully before installing.