




[Upholstery seat cushion center \(second row\), replacing](#)
[Upholstery seat cushion outer \(second row\), replacing](#)
[Upholstery seat cushion \(third row\), replacing](#)
[Upholstery backrest cushion center \(second row\), replacing](#)
[Upholstery backrest cushion outer \(second row\)](#)
[Upholstery backrest cushion \(third row\), replacing](#)
[Seat frame \(third row\), replacement](#)
[Service clips, installing](#)
[Relay heater pad rear seat, replacing](#)

Removing the outer seat (second row)

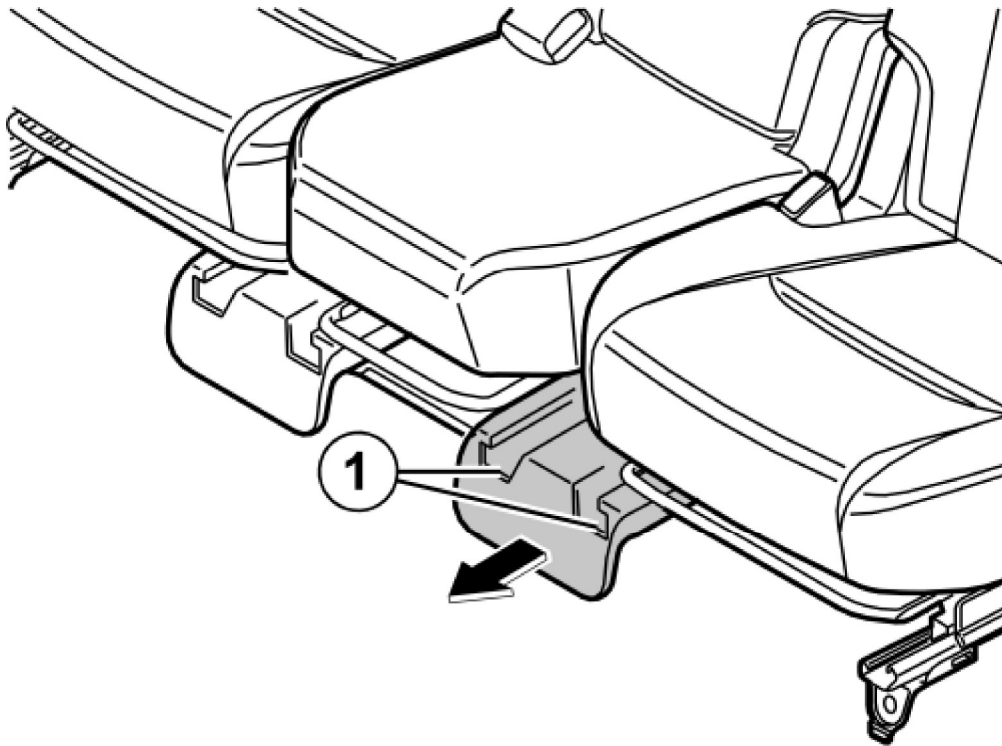

Disconnect the side pieces from the seat.

Remove the 4 screws.
Lift out the seat.

